




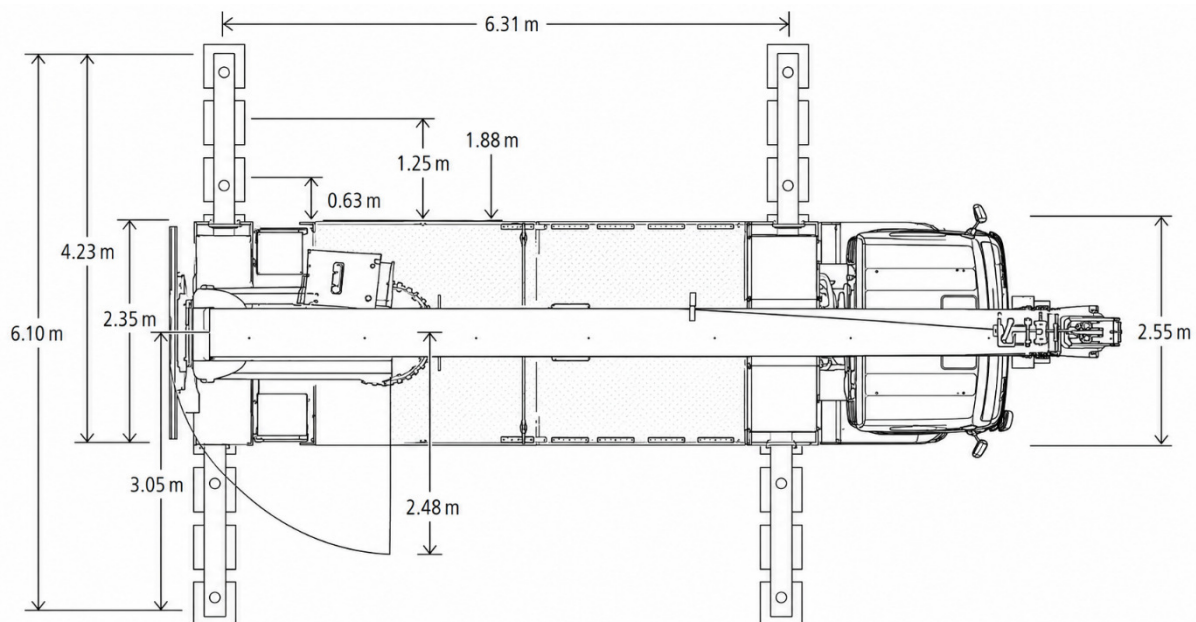


WORKING RANGE CRANE OPERATION

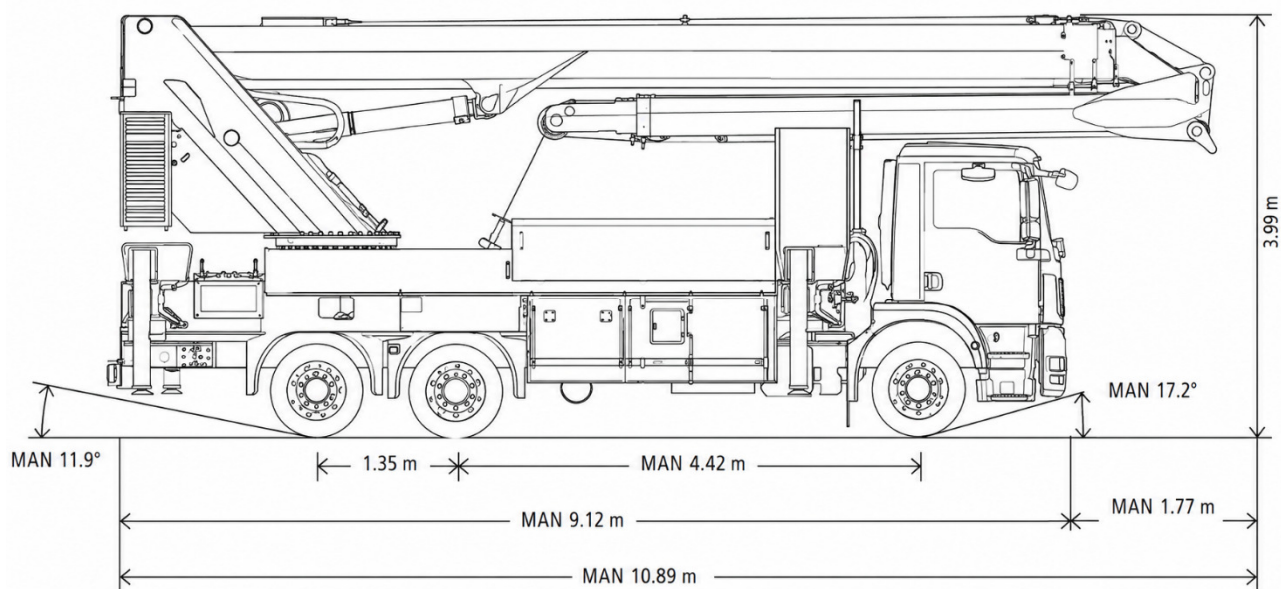

kg Load in kg

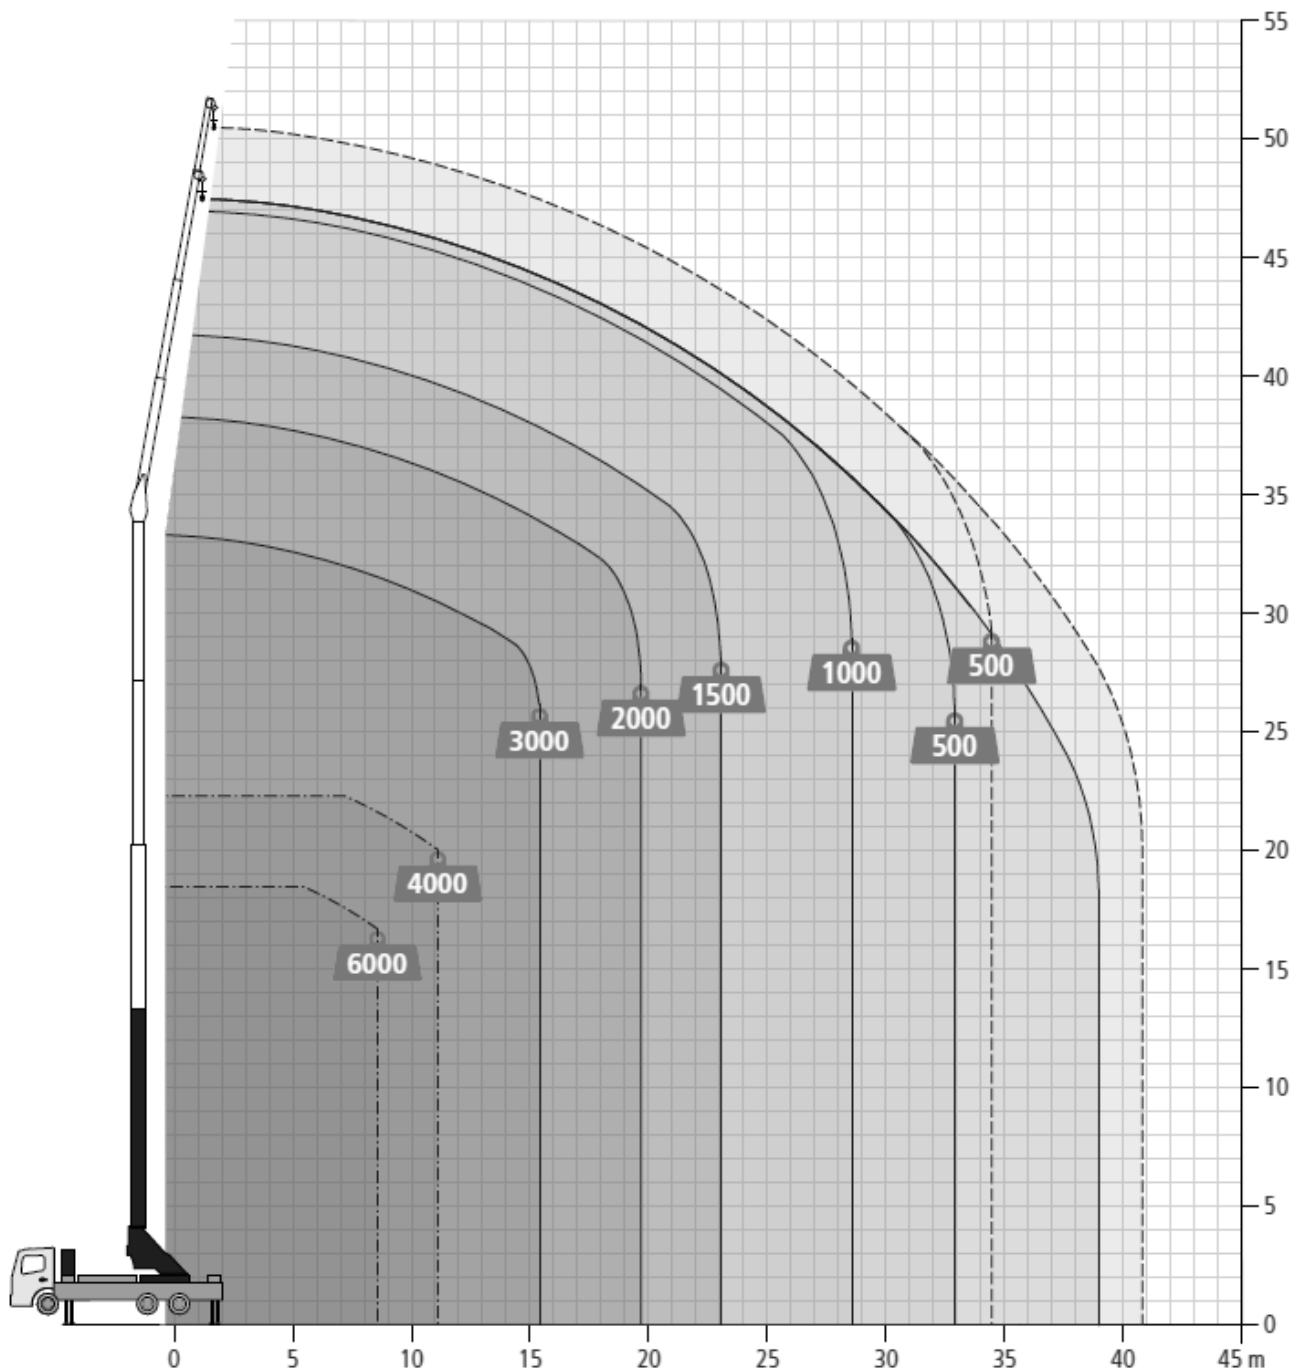

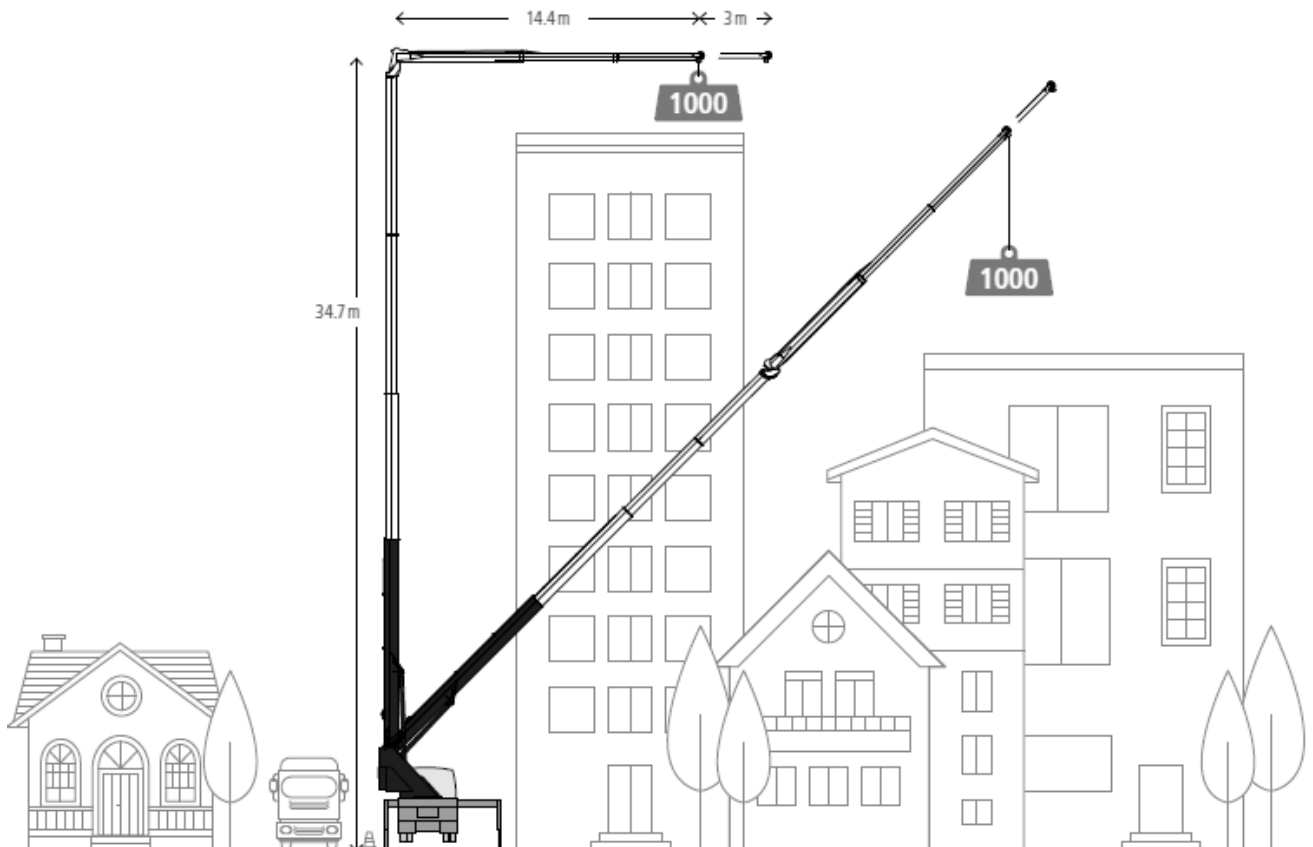

TOWER CRANE MODE:

The boom can be set up completely vertical at a 90° angle to the vehicle. In addition, the aluminium boom, which can be hydraulically extended to over 14 m, can be erected in a 180° position with the joint fully extended. In tower crane mode the AK 48 telescopes loads directly into a building thanks to a right-angled jib position.